

ESU673**HALF WAVE MERCURY VAPOUR RECTIFIER**

Directly heated

RATING

Filament Voltage (volts)	V_f	5-0
Filament Current (amps)	I_f	10-0
Maximum Peak Anode Current (amps)	$I_a(pk)max.$	7-0
Maximum Mean Anode Current (amps)	$I_a(av)max.$	1-75
Maximum Peak Inverse Voltage (kV)	P.I.V.(max)	15
Approximate Voltage Drop (volts)	V_{ir}	10-0
Cathode Heating Time (secs)		60
Condensed Mercury Temperature ($^{\circ}C$)		20-60



DIMENSIONS

Maximum Overall Length	(mm)	282
Maximum Diameter	(mm)	78
Approximate Nett Weight	(ozs)	10½
Approximate Packed Weight	(lbs)	4
Approximate Packed Export Weight	(lbs)	4½

MOUNTING POSITION—Vertical.**BASE**—Super Jumbo—Filament.**TOP CAP**—Anode.**SPECIAL NOTE**

When the rectifier is first placed into service, the filament should be operated at Normal Voltage for 15 minutes without the anode voltage. This will enable the mercury to be correctly distributed.

ESU673
 HALF WAVE MERCURY VAPOUR RECTIFIER
 Directly heated

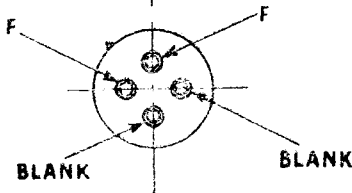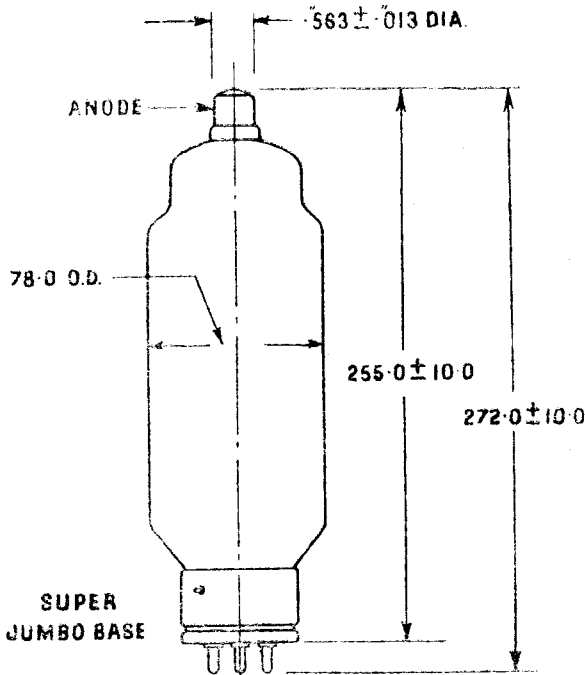

UNDERSIDE VIEW OF BASE

ALL DIMENSIONS IN M.M UNLESS OTHERWISE STATED